

VALTRON® - Quick-Cure Ingot Mounting Adhesive System**VALTRON AD 1238-A RESIN
VALTRON AD 3848-BR HARDENER****Features**

- ⇒ Effective with ID and wire slicing equipment
- ⇒ Patented formulation reduces stress during cure cycle
- ⇒ Cure time of 40 min. at room temperature
- ⇒ Operator friendly color coded system
- ⇒ Available in several packaging systems
- ⇒ Easily debonded with heated VALTRON alkaline detergent solution

Description

The VALTRON Quick-Cure Ingot Mounting Adhesive is a two-component epoxy system consisting of VALTRON AD 1238-A resin and VALTRON AD 3848-BR hardener. The cure time for the VALTRON adhesive is app. 40 min. at room temperature. The fast curing adhesive system effectively adheres semiconductor and photovoltaic ingots to mounting fixtures and slicing beams. The VALTRON Quick-cure adhesive provides excellent bonding with minimal cure time.

Typical Physical Properties


Specific Gravity (@ 20° C):	AD 1238-A	1.21 g/cc
	AD 3848-BR	1.31 g/cc
Color:	AD 1238-A	White
	AD 3848-BR	Red
Viscosity (Brookfield Model HTB):	AD 1238-A	65.000 - 75.000 cps @ 25° C
	AD 3848-BR	19.000 - 30.000 cps @ 25° C

Packaging

- ⇒ 5 Gallon Pail
- ⇒ 4 x 1 Gallon Case
- ⇒ One Gallon Container
- ⇒ One Pint Can
- ⇒ Pre-measured Syringe

VALTRON® - Quick-Cure Ingot Mounting Adhesive System

VALTRON AD 1238-A RESIN
VALTRON AD 3848-BR HARDENER

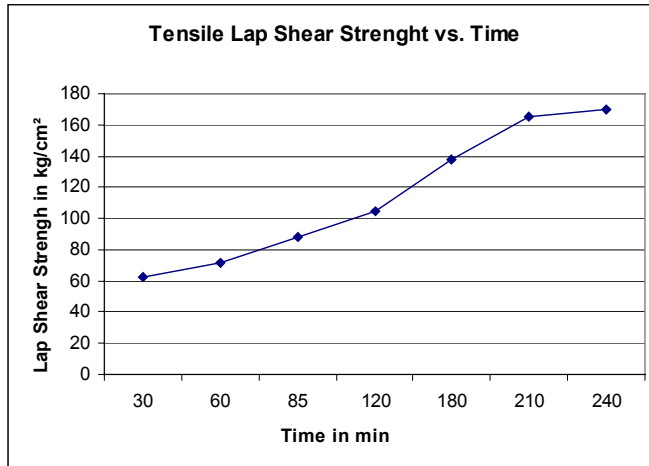

Application

- Step 1** Thoroughly clean the surface of the ingot and the mounting fixture.
- Step 2** Accurately weigh the two components into a mixing cup using 1 part by weight of the AD 1238-A resin and 1 part by weight of the AD 3848-BR hardener.
- Step 3** Thoroughly mix the two adhesive components until a uniform color is achieved.
- Step 4** Apply a thin layer of the adhesive to the mounting fixture or a slicing beam.
- Step 5** Place ingot on to the mounting fixture and wipe off any excess adhesive.
- Step 6** Allow adhesive to cure for app. 40 min. at room temperature

Removal/Demounting

The VALTRON Quick-Cure Ingot Mounting Adhesive is designed to provide a temporary bond of the ingot during the wafering process. The unique properties of this adhesive system allow the removal of the epoxy adhesive using a heated VALTRON high pH alkaline detergent solution. This process allows the sliced wafers to be cleaned of adhesive, saw coolant and kerf in a simple procedure.

- Step 1** Prepare a 15.0 % by volume solution of the VALTRON SP 2500 alkaline detergent and heat to a minimum of 80° C.
- Step 2** Place the sliced wafers in the VALTRON detergent solution.
- Step 3** The adhesive will be removed from the sliced wafers within 10-15 min. The removal time may vary depending on ingot surface conditions.
- Step 4** Thoroughly rinse the demounted wafers with deionized water.

Manufacturer: **VALTECH CORPORATION**
 Supplier: **N. BUCHER AG**, Pfadackerstrasse 9, 8957 Spreitenbach/Switzerland
 Phone: ++41-56 418 19 90
 Fax: ++41-56 418 19 99
<mailto:info@nbucheraq.com>

Information herein is accurate to the best of our knowledge. Suggestions are made without warranty or guarantee of results. Before using, user should determine the suitability of the product for his intended use and user assumes the risk and liability in connection therewith. We do not suggest violation of any existing patents or give permission to practice any patented invention without a license.

VALTRON is a registered trademark of the Valtech Corporation.

4/9/02